

## F100R F200R F200SR 固件说明

1. 请使用 U 盘拷贝固件到根目录，U 盘需要 FAT32 格式，且根目录下同时只能存在一个固件（bin 文件）。
2. 将 U 盘接入灯具 u 盘接口后，打开灯具电源，等待升级进度条完成。
3. 版本号查看方法：进入菜单里灯具信息查看。
4. 版本说明：

| 版本    | 更新内容                   | 日期       |
|-------|------------------------|----------|
| V1.01 | 调整 F100R 使用 V 口电池时的功率. | 20241016 |
| V1.03 | 优化电源风扇异常检测功能.          | 20241030 |

注：详细规格请在官网（[www.godox.com.cn](http://www.godox.com.cn)）下载最新说明书。

## F100R F200R F200SR Firmware Instructions

1. Please copy the firmware file to the root directory of the USB drive. The USB drive must be formatted to FAT32, and only one firmware (bin file) should exist in the root directory at a time.
2. Insert the USB drive into the USB port on the light and turn on the light. Wait for the upgrade progress bar to complete.
3. To check the version number: Navigate to the menu and view the fixture information.
4. Version details:

| Version | What's new   | Date       |
|---------|--|------------|
| V1.01   | Adjusted the power output when using V-mount batteries with the F100R. | 2024-10-16 |
| V1.03   | Optimized abnormal detection function for the power supply fan.        | 2024-10-30 |

**Note:** For more details, please download the newest instruction manual on the official website: [www.godox.com](http://www.godox.com).